



INSTALLATION INSTRUCTIONS INSTRUCCIONES DE MONTAJE



Safety instructions / Instrucciones de seguridad

Precautions / Precauciones:

It is important that you read, fully understand and observe the following safety instructions as well as the installation instructions.
Careless or improper handling may cause injury or property damage.



*Es importante que lea, comprenda completamente y respete las siguientes instrucciones de seguridad, así como las instrucciones de montaje.
El manejo descuidado o inadecuado puede causar lesiones o daños a la propiedad.*

Good footwear is very important. Wear sturdy boots with nonslip soles. Steel-toed safety boots are recommended.



Un buen calzado es muy importante. Póngase botas gruesas con suela antideslizante. Recomendamos las botas de seguridad con puntera de acero.

Knee-protection is recommended!



¡Recomendamos la protección de rodilla!

Always wear gloves when handling and installing the mats.
Heavy-duty, nonslip gloves improve your grip and help to protect your hands.



*Siempre use guantes cuando maneje y monte los pisos de goma.
Los guantes gruesos y antideslizantes mejoran el manejo y ayudan a proteger las manos.*

During installation / durante el montaje:

Do not stand or work under suspended load (pallet)!



¡No se pare ni trabaje bajo carga suspendida (palet)!

- Do not underestimate the weight of the mats. Improper handling may cause injury.
- Only use the recommended tools.
- Observe the safety instructions of the tools' manufacturers.
- Caution when cutting: blade may move quickly through the rubber mat. Be sure you are cutting away from your body.
- Pallets can be broken! Watch out for splinters and / or nails!
- Take care to remove edge protectors or other small parts of packaging from cow feeding areas!



- *No subestime el peso de los pisos de goma. El manejo inadecuado puede causar lesiones.*
- *Solo use las herramientas recomendadas.*
- *Respete las instrucciones de seguridad de los fabricantes de herramientas.*
- *Tenga cuidado al cortar: la cuchilla puede moverse rápidamente a través del piso de goma. Asegúrese de estar cortando lejos de su cuerpo.*
- *¡Los palets se pueden romper! ¡Cuidado con las astillas y / o los clavos!*
- *¡Tenga cuidado de quitar los protectores de bordes u otras partes pequeñas de los envases de las áreas de alimentación de las vacas!*

After installing / después del montaje:



Caution!
Cows will be more active!
*¡Cuidado!
¡Las vacas podrían ser más activas!*



Watch out for uneven edges if the floor is only partially covered.
Tenga cuidado con los desniveles en los bordes si el piso está cubierto solo parcialmente.



Residues on the rubber may cause slippery condition while and shortly after installing!
¡Los residuos sobre la goma pueden causar condiciones resbalosas durante y poco después del montaje!





KRAIBURG KURA / profiKURA for Rotary Parlor

Requirements:**concrete area:**

- smooth
- clean
- minimum 4" (10 cm) thick

mats:



Installation Temperature:
minimum 41°F (5°C) to maximum 86°F
(30°C) (be sure internal temperature of
mats falls within above range)

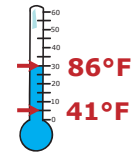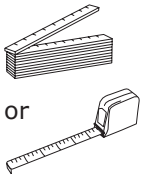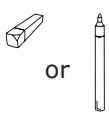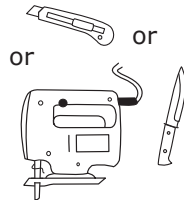**You will need this:****measuring:****marking:****cutting:**

! refer to your local sanitation regulations for restrictions
on anchoring mats in the milking parlor


1 Lay out mats

i Start with the first mat in stall of your choosing

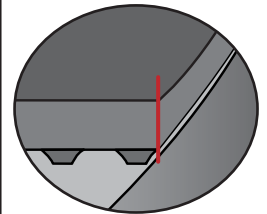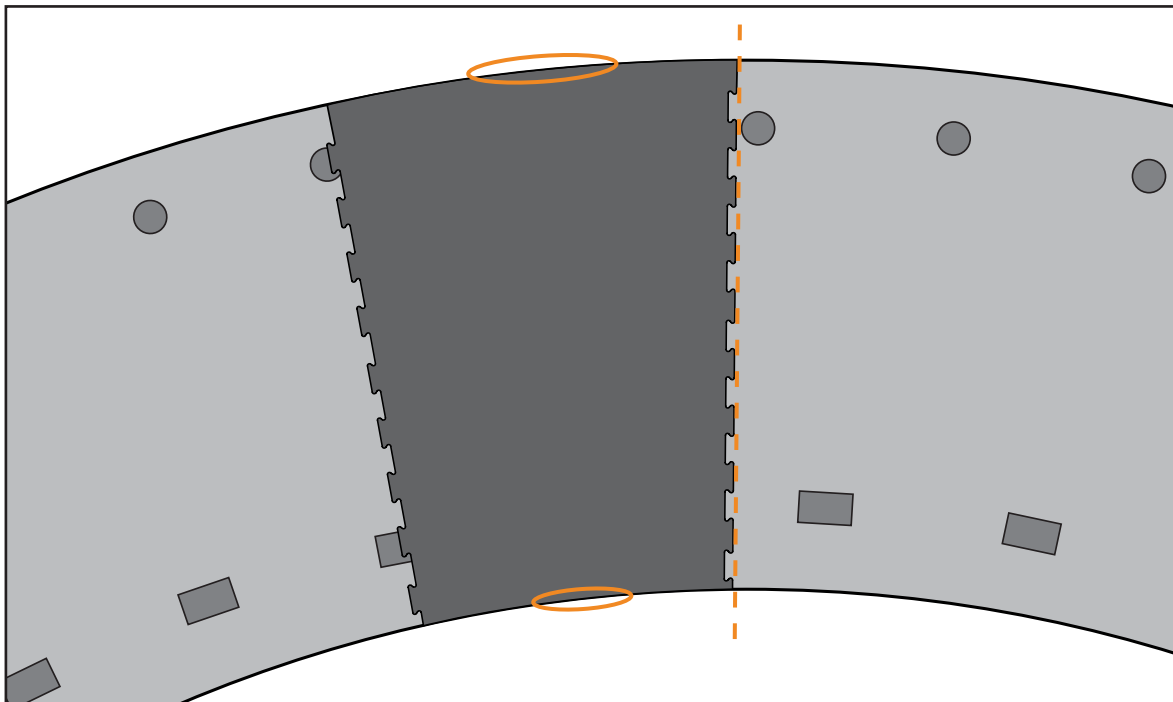


always flush
with the edge!

example

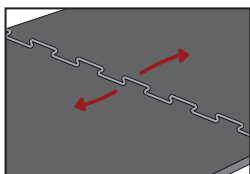


join mats loosely together, lift
them slightly and gently pull
them apart

! avoid creating tension!

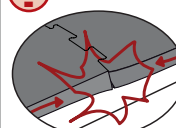

DO NOT
PRESS!

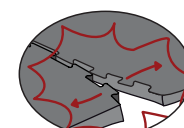

DO NOT
PULL ON
ONE SIDE
ONLY!


! at low temperatures: pull the puzzle seams so
far apart that an opening becomes visible

Appropriate installation may differ due to local conditions.
Therefore the manufacturer is not liable for installation!



② Custom Trimming:


Cut mats to fit

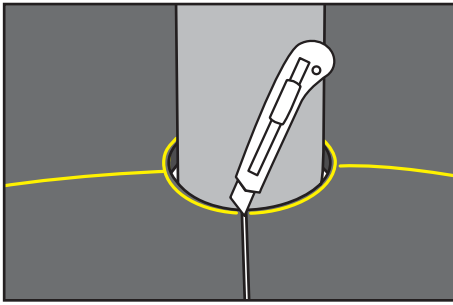

! Important: draw the radius onto the mat so that the pockets can be cut out exactly.

i tips for cutting:


- moisten the blade lightly
- pull the mats slightly

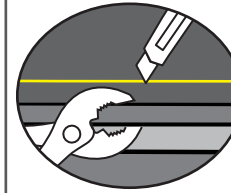


(use pliers for pulling small pieces apart)

- a **power jig saw** is most suitable for cutting **profikURA**

example:

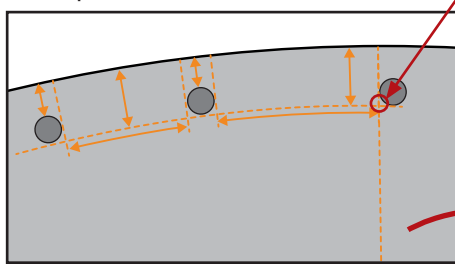


starting point

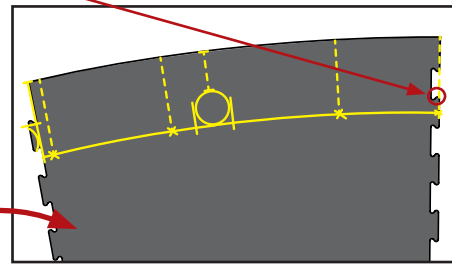

take measurements within the parlor


draw measurements onto the **mat**

i tip: bend measuring stick to draw radius and measurements onto the mat

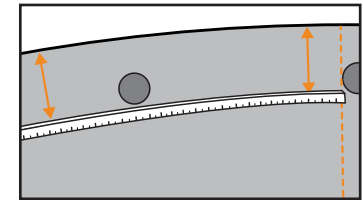


③ If necessary, fasten mats - PLEASE CHECK WITH YOUR LOCAL DAIRY INSPECTOR


If necessary, fasten each mat 3 x on inner radius:

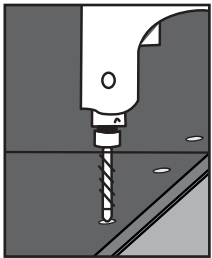



drill

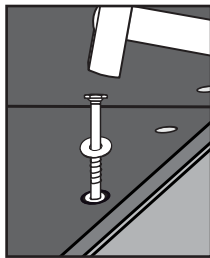

pound in anchors and washers until they are seated firmly and are slightly countersunk

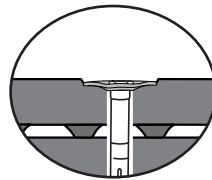

tip: Check to see if the anchor can be felt with a flat object made of metal (e.g. hammer) by sliding it over the anchor. If it can be felt, pound it in deeper!

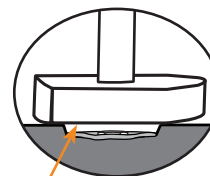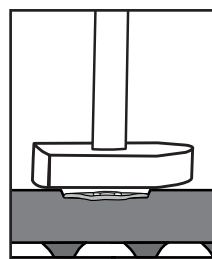


a small gap should be visible



do not pound in too strongly

no tension should develop, the mat should not bulge!

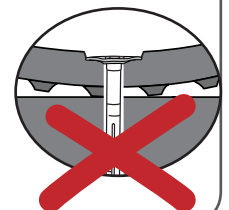

Appropriate installation may differ due to local conditions. Therefore the manufacturer is not liable for installation!



KRAIBURG KURA / profiKURA for Rotary Parlor - US - 2/2019 - I